

CARRIAGE

01.Swivel	DF-3138-00	22.Handle wheel	DF-3036-00
02.Hex. socket head screw	M8x20	23.Feed spring	CF-3035-00
03.Handle knob	CF-6044-00	24.Cross feed dial	
04.Dials indicating plate		(Single dial, Inch)	DF-3032-I0
(Dual dial, Inch)	DF-3034-M0	(Single dial, Metric)	DF-3032-M1
(Dual dial, Metric)	DF-3034-I0	(Dual dial, Inch)	DF-3033-I0
05.Round head screw	M4x6	(Dual dial, Metric)	DF-3033-M1
06.Ciamping plate	CF-3012-00	25.Thrust ball bearing	BR-5110-10
07.T slot screw nut	CF-3039-00	26.Hex.socket head screw	M6x50
08.Saddle locking handle	DF-3021-00	27.Cross feed screw bushing	
09.Washer	CF-3020-00	(For single dial)	DF-3030-00
10.Round head screw	M6x10	(For dual dial)	DF-3029-00
11.Wiper	CF-3007-00	28.Thrust ball bearing	BR-5110-10
12.Round head screw	M6x10	29.Gear	CF-3027-01
13.Wiper	CF-3008-00	30.Cross feed screw (M)	DF-3024-M0
14.Cross slide	CF-3816-00	Cross feed screw (I)	DF-3024-I0
15.Gib adjusting screw	CF-3057-00	31.Saddle	DF-3001-00
16.Taper gib	DF-3017-00	32.Clamping plate	CF-3112-01
17.Hex. socket heat screw	M6x20	33.Hex. socket head screw	M6x16
18.Screw set bushing	DF-3025-01	34.Wiper	CF-3009-00
19.Hex. sqctet head screw	M6x20	35.Cross feed screw	M8x10
20.Female screw nut (M)	CF-3023-M0	36.Hex. socket head screw	M8x20
Female screw nut (I)	CF-3023-I0	37.Lock metal piece	CF-3113-01
21.Nut	M12	38.Ciamping plate	DF-3013-00
		39.Set screw	M6x20
		40.nut	M6

